


Intelligent digital balance charger

Q6AC

Operating manual

Q6AC

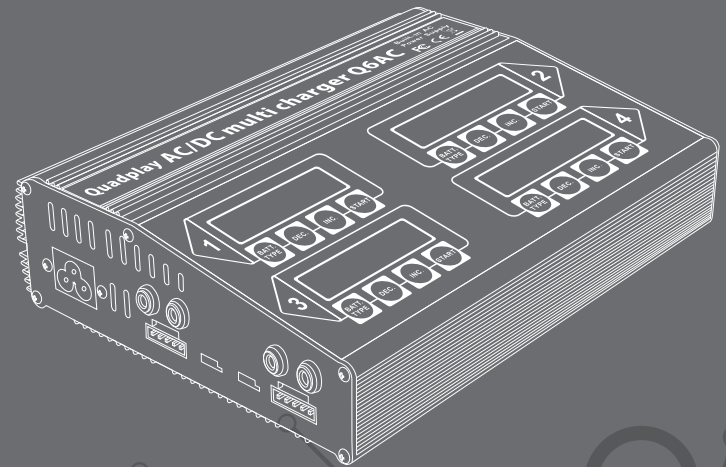

Copyright©2011

Q6AC Intelligent digital balance Charger

Operating Manual

| | |
|--|----|
| 1、 Special features..... | 01 |
| 2、 Performance parameter..... | 02 |
| 3、 Exterior and accessories..... | 02 |
| 4、 Key features..... | 02 |
| 5、 Operating instructions..... | 03 |
| 6、 Warning and error messages..... | 11 |
| 7、 Safety messages..... | 12 |
| 8、 After-sale service and guarantee..... | 12 |

7.Safety message

Although the charger is designed to work in a stable environment to play a role, but in use, you still need careful maintenance, as long as these important tips to follow, that is easy and effective use of your charger!

- 1) When you start the process , especially the discharge process,the unit will become warm , please keep clear of the heat area and do not cover it by anything when using
- 2) Do not keep it in a environment below 5 or above 50
- 3) Use it carefully,do not use it in a wet or corrosive environment
- 4) Keep all the inflammable volatile materials well away from operating area.
- 5) Please don't let the charger get hurt through falling ,bumping , stiking , shaking, heavy press and so on.
- 6) Do not attempt the voltage higher than the requirement by manufactures
- 7) Ensure the type of battery and the voltage of the battery pack is selected correctly.Do not use the different types or different capacities synchronously .
- 8) The standard accessories can only support one battery pack.When you are willing to use multi- packs,please separately purchase the special accessories,never do a disassembly or alteration to the charger
- 9) Do not attempt to charge/discharge the non-recharged battery or damaged battery.
- 10) Keep the charger away from children and pet at all time! Never leave the charger unsupervised when it is connected to its power supply.

8.After-sale service and guarantee

Thank you for purchasing this balance charger ,we will do our best to provide you with a comprehensive after-sale service and protect your rights and interests. Since you purchase the unit,you can enjoy the lifelong guarantee service.

We warrant this product for a period of one year from the date of purchase, if it has a quality problem itself, all guarantee will be free; In case customers can not provide an effective certificate of purchase, we will refer the date of machine ' s internal.

If it is over one year since the purchase date, an appropriate cost will be charged, users need to bear the transportation cost back and forth.

User disassembly, alteration, or damage caused by improper use, they should bear the maintenance and transport costs.

After-sale procedure:

When you can not use the product normally, please contact the local franchiser or the after-sale service person. after products have been confirmed damaged or unable to confirm the causes,you can sent it to the company directly or through the franchiser .

We will normally repair completed and sent it to customers within five working days after receive it.

All rights revised by storms to commit modifications.


1. Special features:

- 1.1 EV employs an advanced charging calculation and design which allow multilayer error to be compatible. It can create a safe charging condition and maximum reduce the danger caused by negligence or setting error of user
 - 1.2 This item adopt prevalent Synchronous buck & boost converter technology, this makes conversion efficiency up to 90%
 - 1.3 Accept all types of R/C batteries:LiPo、Lilo、LiFe、NiMH、NiCd、Pb.
 - 1.4 Simple and efficient user interface makes operation easy, with powerful function and abundant content. Real-time shows you the battery voltage, charge current, temperature of batteries、capacity of charge/discharge、elapsed time、input voltage etc. ,therefore, you can inquire the present state and establish various safety-limited parameters conveniently.
 - 1.5 EV employs an individual-cell-voltage balancer to maintain your pack in balance while charging/discharging. During the process,it can monitor and balance each cell of the pack individually (Tolerance :0.01V)
 - 1.6 Accept individual battery charging/discharging, so you can extend the scope of application of the charger.that is equally useful for the DIY battery.
 - 1.7 Various of charging mode to meet different demand : charging-auto /balance charging/fast charging/storage and cyclic charging etc.
 - 1.8 For users convenience it can store and load maximum five data of different batteries. you can establish the data contains program setting of the battery to charge or discharge continually. these data can be called out at any time you need and the process can be executed without program setting.
 - 1.9 Perform 1-5 cycles of charge>discharge or discharge>charge continually for NiMH / NiCd refreshing
 - 1.10 You can connect a high-precision digital temperature sensor to protect the charger works in a safety temperature .once a battery reaches the maximum temperature you set during charge/discharge, the process will be terminated to protect the battery. this is very important for NiMH / NiCd (separately purchased temperature sensor)
 - 1.11 For technical expert,EV offers PC based program can analysis the characteristic of the battery by USB port.it shows a graph of voltage, current,capacity and temperature curves.and it also shows the individual voltage of each cell in the Lithium battery pack.
- * Separately purchased program kit(Ev-xxxA series)

2. Performance parameter :

| | |
|----------------------------------|----------------------|
| 2.1 AC Input voltage range | AC 110V or 220V |
| 2.2 Input voltage range | DC 11.0V ~ 18.0V |
| 2.3 Charge current range | 0.1A ~ 5.0A |
| 2.4 Discharge current range | 0.1A ~ 1.0A |
| 2.5 Charge power limited | max.50W x 4 |
| 2.6 Discharge power limited | max.5W x 4 |
| 2.7 Balance current | max.250mA |
| 2.8 Balance tolerance | ±0.01V |
| 2.9 NiCd/NiMH battery cell count | 1 ~ 15cells |
| 2.10 Lithium battery types | Li-Po, Li-ion, Li-Fe |
| 2.11 Lithium battery cell count | 1-6series |
| 2.12 Pb battery voltage | 2V-20V |
| 2.13 Weight | 1430g |
| 2.14 Dimensions | 228x171x65mm |

3. Exterior and accessories

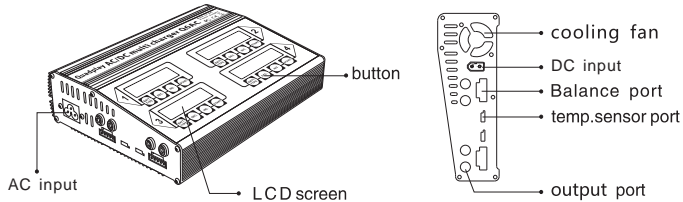

4. Key features :

Mode / Esc : mode selection/stop/back button. Press this key to select in the main menu or back to the main menu, and to stop during the process.


Dec. / Inc. : reduce and increase button, you can browse other concerning informations by this button during the charge/discharge process. When you are setting parameters, press **Dec.** key for reduce, and **Inc.** key for increase.

Enter / Start : select/enter button, to start work by press it more than 2 seconds.


6. Warning and error messages

| | | |
|--------------------------------------|---|---|
| REVERSE POLARITY | → | The output is connected to a battery with incorrect polarity |
| CONNECTION BREAK | → | This will be displayed in case of detecting an interruption of the connection between battery and output or voluntarily disconnecting the charge lead during the operation of charge or discharge on output |
| SHORT ERR | → | There was a short-circuit at output. please check the charging leads. |
| INPUT VOL ERR | → | The voltage of input power drops below the limit. |
| VOL SELECT ERR | → | The voltage of Lithium battery pack was selected incorrectly. Verify the voltage of battery pack carefully |
| BREAK DOWN | → | There happens the malfunction at the charger circuit by any reason. |
| BATTERY CHECK LOW VOLTAGE | → | The processor detects the voltage is lower than you set at Lithium program. please check the cell count of the battery pack. |
| BATTERY CHECK HIGH VOLTAGE | → | The processor detects the voltage is higher than you set at Lithium program. please check the cell count of the battery pack. |
| BATTERY VOLTAGE CELL LOW VOL | → | The voltage of one of the cell in the Lithium battery pack is too low. please check the voltage of the cell one by one. |
| BATTERY VOLTAGE CELL HIGH VOL | → | The voltage of one of the cell in the Lithium battery pack is too high. please check the voltage of the cell one by one. |
| BATTERY VOL ERR CELL CONNECT | → | There are bad connection at the individual connector. please check the connector and cables carefully |
| TEMP OVER ERR | → | The internal temperature of the unit goes too high. cool down the unit. |
| CONTROL FAILURE | → | The processor can not continue to control the feeding current by any reason. The unit needs to be repaired. |

 5.5.1 charging Pb battery




 As you can see on left, you can set up the charge current on the left, the nominal of the second line and voltage of the battery on the right of the second line. the charge current ranges from 0.1-10.0A and the voltage should be matched with the battery being charged. start the charge process by pressing "Enter Start" key for more than 2 seconds.




The screen displays the state of charging process. to stop charging forcibly, press "Mode Esc" key once.

 5.5.2 discharging Pb battery



 Set discharge current on the left and final voltage on the right, the discharge current ranges from 0.1-5.0A and the voltage should be matched with the battery being discharged. start the discharge process by pressing "Enter Start" key for more than 2 seconds.



The screen displays the current state of discharge.

5.6 save data and load data program

This charger can store/load up to 5 data of batteries, you can call out the data for the process without setting up the program again.

 
5.6.1 save data




Press "Mode Esc" key to the screen on the left then press "Enter Start" key to enter into the submenu.



The blinking (01) shows you the data NO, you can press "Dec./Inc." key to change it. Press "Dec./Inc." key can select the type of battery, voltage, capacity, and you can set them by pressing "Enter Start" key, then press "Enter Start" key for more than 2 seconds to select the charge mode.



 Setting up charge/discharge current and final voltage.




To save the data, press "Enter Start" key for more than 2 seconds.


5.6.2 load data



 Press "Mode Esc" key to the screen on the left, then press "Enter Start" key to enter the submenu.



 
You can press "Dec./Inc." key to select the data number when the (01) field is blinking.



Press "Enter Start" key for more than 2 seconds, it will show you the left screen, loading the data

5. Operating instructions :

5.1 main menu

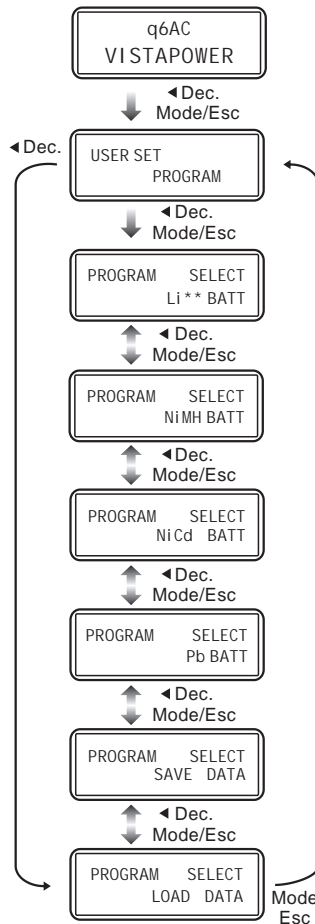

This shows you the type of charger for 2s, press "Enter Start" into the main menu after self-check OK

User set program, press "Mode Esc" key down and "Dec." key upward for circulatory choose. press "Enter Start" key into submenu.

Lithium battery program, press "Mode Esc" key down and "Dec." key upward for circulatory choose. Press "Enter Start" key into submenu.

NiMH battery program, Press "Mode Esc" key down and "Dec." key upward for circulatory choose. press "Enter Start" key into submenu.


NiCd battery program, Press "Mode Esc" key down and "Dec." key upward for circulatory choose. press "Enter Start" key into submenu.

Pb battery program, Press "Mode Esc" key down and "Dec." key upward for circulatory choose. press "Enter Start" key into submenu.

Save data program, Press "Mode Esc" key down and "Dec." key upward for circulatory choose. press "Enter Start" key into submenu.

Load data program, Press "Mode Esc" key down and "Dec." key upward for circulatory choose. press "Enter Start" key into submenu.

5.2 Initial parameter set up

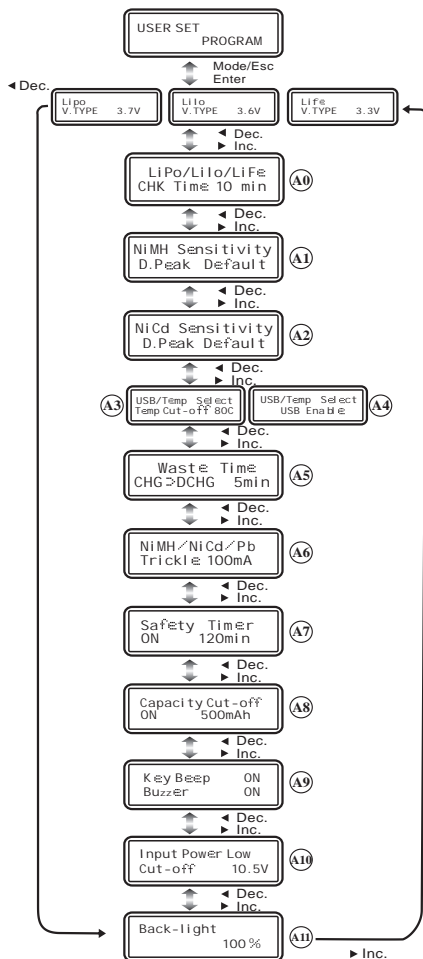

Tips: please set up correctly in the "user set" menu before into the job for the first time you use it .

Press **Enter/Start** key to the first screen on the left, then press **Mode/ESC** key to enter the into parameter setting menu.


You can switched at the same level menu by **Dec./Inc.** key. please refer the detailed flow chart on the left .

When you are willing to alter the parameter value in the program,press **Enter/Start** key to makeit blink,then change key. the value will

EV can accept three types of Lithium batteries : LiPo/LiIo/ LiFe ; you have to check the battery carefully and set it up correctly, or it will cause a explode! (Please refer the table A)

EV can recognise the cell count of Lithium battery automatically at the beginning of charge or discharge process but deeply discharged battery can be perceived incorrectly. To prevent the error, you can set the time term to verify the cell count by the processor. (see the screen (A0)) Normally, 10 minutes are enough to perceive it correctly. For the battery of larger capacity, you may extend the time term.and for the battery of smaller capacity, you may reducethe term or use withthe default value

5.4 NiMH/NiCd battery program

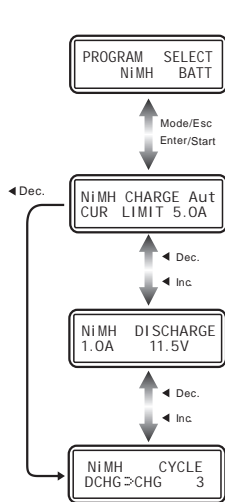


Press **Mode/ESC** key to the screen on the left, then press **Enter/Start** key to **Enter/Start** into the submenu. You can switched at the same level menu to select the mode by **Dec./Inc.** Key. please refer the etailed flow chart on the left. When you are willing to alter the parameter value in the program, press **Enter/Start** key to make it blink, then change the value with **Dec./Inc.** key. the value will be stored by pressing **Enter/Start** key once. then press **Enter/Start** key for more than 2 seconds to start the process. Since the menu of NIMH are the same as NiCd, there is an example of NIMH only.

"CHARGE" mode the default mode is "AUT" . In "AUT" mode, you need to set the upper limit of charge current to avoid from higher feeding current that may damage the battery. Because some batteries of low impedance and small capacity can lead to the higher charge current by the processor at automatic charge mode. But in "Man" mode, it will charge the battery with the charge current you set at the display. Each mode can be switched by pressing start/enter key, when the current field is blinking, press **Dec./Inc.** Key for more than 1 second.

"DISCHARGE " mode the discharge current ranges from 0.1A to 5.0A and the final voltage ranges from 0.1 to 25.0V , the operating method is similar as Lithium battery. The final voltage of NiMH battery is 1.0V/cell, and the NiCd is 0.85V/cell, please refer the recommend by the battery of manufacturer.

"CYCLE " mode this charger can perform 1-5 cycles of DCHG >CHG or CHG >DCHG continually. You can select it for the new Ni** battery or the long-term placement Ni** battery . please set up carefully, or it will damage the battery! To set the parameter please follow the previous charge/discharge menu

5.4.1 After check all the mode , to start the process press **Enter/Start** key for more than 2 seconds

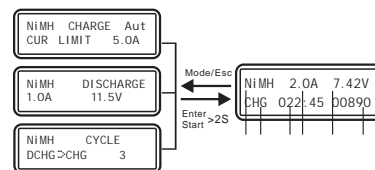

The screen displays the present state of process. To stop it press **Mode/ESC** key; Description: :the type of battery, :operating mode: CHG=charge, DSC=discharge, DCHG>CHG or CHG>DCHG=the cycle mode ; :elapsed time, :charge/discharge current of the battery, :voltage of the battery pack, :capacity of charge/discharge

 
You can inquire the temperature and V continually by press **Dec./Inc.** key

5.5 Pb battery program


This is programmed for charging Pb battery with nominal voltage from 2 to 24V, Pb battery can not be charged rapidly. they can only deliver relatively lower current compare to their capacity. the optimal charge current will be 1/10 of the capacity. please always follow the instruction supplied by the manufacturer of battery.

5.3.2 According to press \leftarrow Dec. / \rightarrow Inc. key you can inquire the individual voltage of each batteries and final voltage etc. continually as follow (this need to connect the balance plug):

\rightarrow Inc.



 You can check the individual voltages of each cell in the battery pack while using the individual connection cable to the battery.



The final voltage will be reached at the end of process

\leftarrow Dec.



 
You can inquire the safety capacity

\leftarrow Dec.




You can inquire the safety time

\leftarrow Dec.




You can use the 3-pin port as an USB port or inquire the safety temperature value

 \leftarrow Dec.



It shows you the external temperature when the temperature sensor is connected you can inquire

 \leftarrow Dec.



This shows the present voltage of input power

(A1)(A2) shows the trigger voltage for automatic charge termination of NiMH and NiCd battery (V), the effective value ranges from 5 to 20mV per cell. If V is set higher, there is a danger of overcharging the battery; if it is set lower, there is a possibility of premature termination. please refer technical specification of the battery. (NiCd: 12mV, NiMH: 7mV)

Tips : If the voltage of charging battery is lower than 2.5V, V may can not be perceived, this will cause a danger of discharge. You can connect a temperature sensor or use the charger current above 1C to avoid it.

There is a 3-pin port on the left side of the unit. It can be used as a temperature sensor port or USB port. If the port is assigned as a temp. port, you can use an optional temperature probe to contact the surface of battery (see the screen (A3)) and you can set the maximum temperature at which the danger should allow battery to reach during charge, once a battery reaches this value the process will be terminated to protect the battery. When it is selected as an USB port, you can connect the charger to your PC with an optional USB cable. this can utilize the optional software that can show you the charge process at PC. (see the screen (A4))

When NiMH or NiCd battery is on the cyclic process of charge/discharge, it can often become warm . The program insert a time delay to occur after each charge and discharge process to allow the battery adequate time to cool down before being subjected to the next process. (see the screen (A5)) the value ranges from 1 to 60 minutes. If you are not sure, you can set it over 10 minutes.

The charger will automatically supply the trickle function to achieve the full charge with out overheating the battery after fast charge has been terminated. you can alter the trickle value when the charger shows you the screen (A6)

When you start a charge process, the integral safety timer automatically starts running at the same time. this is programmed to prevent overcharge the battery if it proves to be faulty, or if the termination circuit cannot detect the battery full. (A7) shows you this program can be on or off, and you can set the maximum safety time, the value ranges from 10 to 720min. As the same principle, there is a maximum-capacity-limited function. See (A8), the value ranges from 10 to 20000mAh.

At the screen (A9) you can set the audible sounds to be on or off by this program.

When you use the car battery to supply power for charger, screen (A10) shows you this program monitors the voltage of input DC battery. If the voltage drops below the value you set the operation forcibly terminated to protect the input battery.

You can adjust the brightness of LCD screen at the charger (see (A11))

Please refer the information below (chart A) , and select the correct parameter for each battery, or it will cause a serious result!

chart A

| types | Li-Po | Li-Io | Li-Fe | NiMH | NiCD | Pb |
|---|-------|-------|-------|-------|-------|-------|
| Standard voltage (V/cell) | 3.70 | 3.60 | 3.30 | 1.20 | 1.20 | 2.00 |
| Max. Charge voltage cut off level (V/cell) | 4.20 | 4.10 | 3.60 | 1.60 | 1.60 | 2.45 |
| Allowable fast current | <1C | <1C | <4C | <2C | <2C | <0.4C |
| Min. Discharge voltage cut off level (V/cell) | ≥3.00 | ≥3.00 | ≥2.00 | ≥1.00 | ≥0.85 | ≥1.75 |

